

Adapter to Service-Tool ZTH

- Easy Connection via pressure clamps
- Configuration and parameterization of actuators with ZTH, ZTH-GEN or PC-Tool



Technical data

٠V	
/ class II	
lug	
unicative actuators	
e	
04/108/EG	
330V	
<u>_</u>	

Safety notes



•

- The device is not allowed to be used outside the specified field of application
- It may only be installed by suitably trained personnel.
- The device does not contain any parts that can be replaced or repaired by the user and may only be opened at the manufacturer's site.



