

Rotary actuator with fail-safe for ball valves

- Torque motor 10 Nm
- Nominal voltage AC 24...240 V / DC 24...125 V
- Control Open/close
- Deenergised closed (NC)
- · with 2 integrated auxiliary switches



Technical data			
	Electrical data	Nominal voltage	AC 24240 V / DC 24125 V
		Nominal voltage frequency	50/60 Hz
		Nominal voltage range	AC 19.2264 V / DC 21.6137.5 V
		Power consumption in operation	6 W
		Power consumption in rest position	2.5 W
		Power consumption for wire sizing	9.5 VA
		Auxiliary switch	2 x SPDT, 1 x 10% / 1 x 1190%
		Switching capacity auxiliary switch	1 mA3 A (0.5 A inductive), AC 250 V
		Connection supply / control	Cable 1 m, 2 x 0.75 mm ²
		Connection auxiliary switch	Cable 1 m, 6 x 0.75 mm ²
		Parallel operation	Yes (note the performance data)
	Functional data	Torque motor	10 Nm
		Torque fail-safe	10 Nm
		Direction of motion fail-safe	Deenergised NC, valve closed (A – AB = 0%)
		Manual override	by means of hand crank and locking switch
		Running time motor	75 s / 90°
		Running time fail-safe	<20 s / 90°
		Sound power level, motor	45 dB(A)
		Position indication	Mechanical
		Service life	Min. 60'000 fail-safe positions
	Safety	Protection class IEC/EN	II reinforced insulation
		Protection class UL	II reinforced insulation
		Protection class auxiliary switch IEC/EN	II reinforced insulation
		Degree of protection IEC/EN	IP54
		Degree of protection NEMA/UL	NEMA 2
		Enclosure	UL Enclosure Type 2
		EMC	CE according to 2014/30/EU
		Low voltage directive	CE according to 2014/35/EU
		Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14
		Certification UL	cULus according to UL60730-1A, UL60730-2- 14 and CAN/CSA E60730-1:02
		Certification UL note	The UL marking on the actuator depends on the production site, the device is UL-compliant in any case
		Mode of operation	Type 1.AA.B
		Rated impulse voltage supply / control	4 kV
		Rated impulse voltage auxiliary switch	2.5 kV
		Control pollution degree	3
		Ambient temperature	-3050°C
		Storage temperature	-4080°C
		Ambient humidity	Max. 95% r.H., non-condensing
		Servicing	maintenance-free

2.3 kg

Weight

Weight

Rotary actuator fail-safe, Open/close, AC 24...240 V / DC 24...125 V, 10 Nm, with 2 integrated auxiliary switches



Safety notes



- This device has been designed for use in stationary heating, ventilation and airconditioning systems and must not be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.
- Outdoor application: only possible in case that no (sea) water, snow, ice, insolation
 or aggressive gases interfere directly with the actuator and that is ensured that the
 ambient conditions remain at any time within the thresholds according to the data
 sheet.
- · Caution: Power supply voltage!
- Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- · Cables must not be removed from the device.
- The device contains electrical and electronic components and must not be disposed
 of as household refuse. All locally valid regulations and requirements must be
 observed.
- The two switches integrated in the actuator are to be operated either on power supply voltage or at safety extra-low voltage. The combination power supply voltage/ safety extra-low voltage is not permitted.

Product features

Mode of operation

The actuator is equipped with a universal voltage feed module that can utilise supply voltages of AC 34, 340 V and DC 34, 135V

voltages of AC 24...240 V and DC 24...125V.

The actuator moves the ball valve to the operating position at the same time as tensioning the return spring. The ball valve is turned back to the fail-safe position by spring force when the supply voltage is interrupted.

Simple direct mounting

Simple direct mounting on the ball valve with only one screw. The mounting orientation

in relation to the ball valve can be selected in 90° steps.

Manual override

By using the hand crank the valve can be operated manually and engaged with the locking switch at any position. Unlocking is carried out manually or automatically by

applying the operating voltage.

Adjustable angle of rotation

High functional reliability The actuator

Adjustable angle of rotation with mechanical end stops.

The actuator is overload protected, requires no limit switches and automatically stops when the end stop is reached.

Flexible signalization

The actuator has one auxiliary switch with a fixed setting and one adjustable auxiliary switch. They permit a 10% or 11...90% angle of rotation to be signaled.

Electrical installation



Notes


- · Caution: Power supply voltage!
- Parallel connection of other actuators possible. Observe the performance data.



Electrical installation

Wiring diagrams

AC 24...240 V / DC 24...125 V, open/close

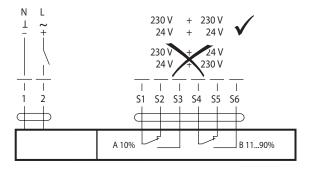

Cable colours:

1 = blue

2 = brown

S1 = violet

S2 = red

S3 = white


S4 = orange

S5 = pink

S6 = grey

Operating controls and indicators

Auxiliary switch settings

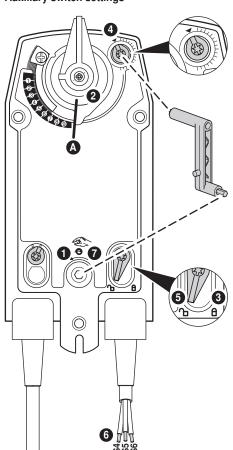



Note: Perform settings on the actuator only in deenergised state.

Manual override

Turn the hand crank until the desired switching position is set.

2 Spindle clamp

Edge line **A** displays the desired switching position of the actuator on the scale.

3 Fasten the locking device

Turn the locking switch to the "Locked padlock" symbol.

4 Auxiliary switch

Turn rotary knob until the notch points to the arrow symbol.

5 Unlock the locking device

Turn the locking switch to the "Unlocked padlock" symbol or unlock with the hand crank.

6 Cable

Connect continuity tester to S4 + S5 or to S4 + S6.


Manual override


Turn the hand crank until the desired switching position is set and check whether the continuity tester shows the switching point.



Dimensions [mm]

Dimensional drawings

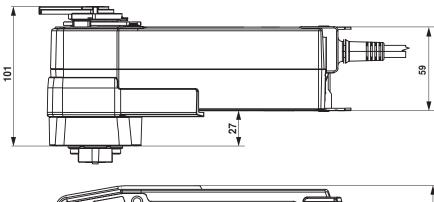

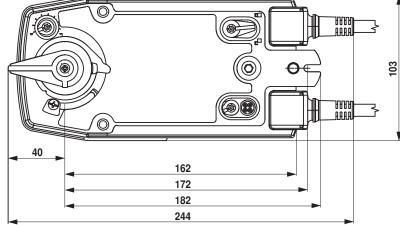

Further documentation

- The complete product range for water applications
- Data sheets for ball valves
- Installation instructions for actuators and/or ball valves
- · General notes for project planning