

Technical data sheet

Rotary actuator with fail-safe for ball valves and butterfly valves

- Torque motor 20 Nm
- Nominal voltage AC 24...240 V / DC 24...125 V
- Control Open/close
- Deenergised closed (NC)
- with 2 integrated auxiliary switches



Technical data

Electrical data	Nominal voltage	AC 24240 V / DC 24125 V
	Nominal voltage frequency	50/60 Hz
	Nominal voltage range	AC 19.2264 V / DC 21.6137.5 V
	Power consumption in operation	7 W
	Power consumption in rest position	3.5 W
	Power consumption for wire sizing	18 VA
	Auxiliary switch	2 x SPDT, 1 x 10% / 1 x 1190%
	Switching capacity auxiliary switch	1 mA3 A (0.5 A inductive), AC 250 V
	Connection supply / control	Cable 1 m, 2 x 0.75 mm ²
	Connection auxiliary switch	Cable 1 m, 6 x 0.75 mm ²
	Parallel operation	Yes (note the performance data)
Functional data	Torque motor	20 Nm
	Torque fail-safe	20 Nm
	Direction of motion fail-safe	Deenergised NC, valve closed $(A - AB = 0\%)$
	Manual override	by means of hand crank and locking switch
	Running time motor	75 s / 90°
	Running time fail-safe	<20 s / 90°
	Sound power level, motor	45 dB(A)
	Position indication	Mechanical
	Service life	Min. 60'000 fail-safe positions
Safety	Protection class IEC/EN	II reinforced insulation
	Protection class UL	II reinforced insulation
	Protection class auxiliary switch IEC/EN	II reinforced insulation
	Degree of protection IEC/EN	IP54
	Degree of protection NEMA/UL	NEMA 2
	Enclosure	UL Enclosure Type 2
	EMC	CE according to 2014/30/EU
	Low voltage directive	CE according to 2014/35/EU
	Certification IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-14
	Certification UL	cULus according to UL60730-1A, UL60730-2- 14 and CAN/CSA E60730-1:02
	Certification UL note	The UL marking on the actuator depends on the
		production site, the device is UL-compliant in
		any case
	Mode of operation	Type 1.AA.B
	Rated impulse voltage supply / control	4 kV
	Rated impulse voltage auxiliary switch	2.5 kV
	Control pollution degree	3
	Ambient temperature	-3050°C
	Storage temperature	-4080°C
	Ambient humidity	Max. 95% r.H., non-condensing
	Servicing	maintenance-free
Mechanical data	Connection flange	F05
Weight	Weight	2.5 kg

Rotary actuator fail-safe, Open/close, AC 24...240 V / DC 24...125 V, 20 Nm, with 2 integrated auxiliary switches



	Safety notes		
$\underline{\mathbb{V}}$	 This device has been designed for use in stationary heating, ventilation and air- conditioning systems and must not be used outside the specified field of applicatio especially in aircraft or in any other airborne means of transport. 		
	 Outdoor application: only possible in case that no (sea) water, snow, ice, insolation or aggressive gases interfere directly with the actuator and that is ensured that the ambient conditions remain at any time within the thresholds according to the data sheet. 		
	Caution: Power supply voltage!		
	 Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation. 		
	• The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.		
	Cables must not be removed from the device.		
	 The device contains electrical and electronic components and must not be dispose of as household refuse. All locally valid regulations and requirements must be observed. 		
	 The two switches integrated in the actuator are to be operated either on power supply voltage or at safety extra-low voltage. The combination power supply voltage safety extra-low voltage is not permitted. 		
Product features			
Mode of operation	The actuator is equipped with a universal voltage feed module that can utilise supply		
Mode of operation	voltages of AC 24240 V and DC 24125V.		
Simple direct mounting	voltages of AC 24240 V and DC 24125V. The actuator moves the valve to the operating position at the same time as tensionin the return spring. The valve is turned back to the fail-safe position by spring force		
	voltages of AC 24240 V and DC 24125V. The actuator moves the valve to the operating position at the same time as tensionin the return spring. The valve is turned back to the fail-safe position by spring force when the supply voltage is interrupted. Simple direct mounting on the rotary valve or butterfly valve with mounting flange. The		
Simple direct mounting	 voltages of AC 24240 V and DC 24125V. The actuator moves the valve to the operating position at the same time as tensioning the return spring. The valve is turned back to the fail-safe position by spring force when the supply voltage is interrupted. Simple direct mounting on the rotary valve or butterfly valve with mounting flange. The mounting orientation in relation to the fitting can be selected in 90° steps. By using the hand crank the valve can be operated manually and engaged with the locking switch at any position. Unlocking is carried out manually or automatically by 		
Simple direct mounting Manual override	 voltages of AC 24240 V and DC 24125V. The actuator moves the valve to the operating position at the same time as tensioning the return spring. The valve is turned back to the fail-safe position by spring force when the supply voltage is interrupted. Simple direct mounting on the rotary valve or butterfly valve with mounting flange. The mounting orientation in relation to the fitting can be selected in 90° steps. By using the hand crank the valve can be operated manually and engaged with the locking switch at any position. Unlocking is carried out manually or automatically by applying the operating voltage. 		


Electrical installation		
\bigwedge	Notes	 Caution: Power supply voltage! Parallel connection of other actuators possible. Observe the performance data.



Electrical installation


Wiring diagrams

AC 24...240 V / DC 24...125 V, open/close

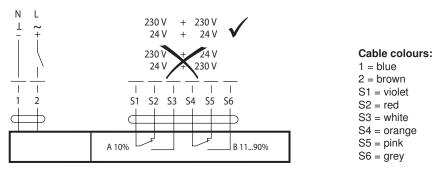

Operating controls and indicators

Auxiliary switch settings

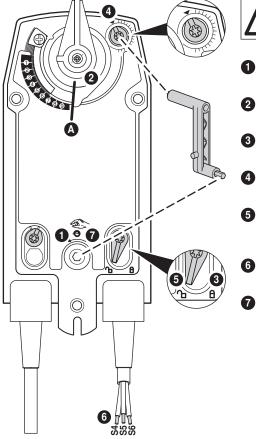

Note: Perform settings on the actuator only in deenergised state.

1 Manual override

Turn the hand crank until the desired switching position is set.

2 Spindle clamp

Edge line A displays the desired switching position of the actuator on the scale.

3 Fasten the locking device

Turn the locking switch to the "Locked padlock" symbol.

Auxiliary switch

Turn rotary knob until the notch points to the arrow symbol.

5 Unlock the locking device

Turn the locking switch to the "Unlocked padlock" symbol or unlock with the hand crank.

6 Cable

Connect continuity tester to S4 + S5 or to S4 + S6.


7 Manual override

Turn the hand crank until the desired switching position is set and check whether the continuity tester shows the switching point.



Dimensions [mm]

Dimensional drawings

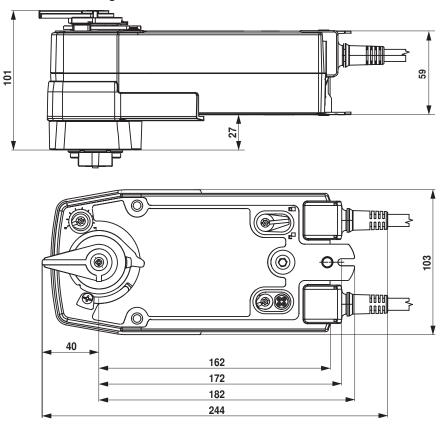

Further documentation

- The complete product range for water applications
- Data sheets for rotary valves and butterfly valves
- · Installation instructions for actuators and/or rotary valves and butterfly valves
- General notes for project planning