

Differential Pressure Sensor Air

Differential pressure transmitter with 8 selectable ranges and outputs 0...5 V, 0...10 V or 4...20 mA. For monitoring the differential pressure of air and other non-flammable and non-aggressive gases. Monitoring air filters, fans, industrial cooling air cycles, control of air and fire dampers. Options available with LCD display, auto-zero feature. IP65 / NEMA 4X rated enclosure.





Type Overview							
	Туре	Measuring range pressure	Output signal active pressure	Burst pressure	Display type	Additional feature	
	22ADP-18Q	0250 Pa	DC 010 V, DC 05 V, 420 mA	40 kPa	-	-	
	22ADP-18QA	0250 Pa	DC 010 V, DC 05 V, 420 mA	40 kPa	-	Auto-Zero	
	22ADP-18QB	0250 Pa	DC 010 V, DC 05 V, 420 mA	40 kPa	LCD	Auto-Zero	
	22ADP-18QL	0250 Pa	DC 010 V, 420 mA, DC 05 V	40 kPa	LCD	-	
Technical Data							
	Electrical data	Power supply DC	;	1524 V	′, ±10%, 1.1 W		
		Power supply AC	;	24 V, , ±	10%, 1.7 VA		
		Electrical connection		Removable spring loaded terminal block max 2.5 mm ²			
		Cable entry		Cable gland with strain relief Ø68 mm			
	Functional data	Sensor Technology		Piezo measuring element			
		Multirange Output signal active note		8 measuring ranges selectable			
				Output DC 05/10 V selectable with switch Voltage output: min. 10 k Ω load Current output: max. 500 Ω load			
		Display		LCD, 29x35 mm with backlight Measured values: Pa, inchWC (configurable)			
		Application		Air			
		Response time		Adjustable 0.8s or 4.0s			



Technical data sheet	22ADP-18Q
Technical data sheet	ZZADP-TOQ

Measuring data

easuring data	Measuring values	Differen	Differential pressure			
	Measuring fluid	Air and	Air and non-aggressive gases			
	Measuring range settings pressure	Setting	range [Pa]	range [inch WC]	Factory	
		S0	0250	01	~	
		S1	0100	00.4		
		S2	050	00.2		
		S3	025	00.1		
		S4	-2525	-0.10.1		
		S5	-5050	-0.20.2		
		S6	-100100	-0.40.4		
		S7	-150150	-0.60.6		
	Accuracy pressure		n compared t range <250	to the reference d Pa	levice	
Materials	Cable gland	PA6, bla	ack			
	Housing	Bottom:	Lexan, orang Lexan, oran 167 NBR70, stant	ige		
Safety data	Ambient humidity	Max. 95	5% r.H., non-	condensing		
	Ambient temperature	-1050	-1050°C [15120°F]			
	Fluid temperature	-1050	-1050°C [15120°F]			
	Protection class IEC/EN	III Safet	III Safety Extra-Low Voltage (SELV)			
	Protection class UL	UL Clas	UL Class 2 Supply			
	EU Conformity	CE Mar	CE Marking			
	Certification IEC/EN	IEC/EN	IEC/EN 60730-1 and IEC/EN 60730-2-6		-6	
	Certification UL		cULus acc. to UL60730-1A/-2-6, CAN/CS E60730-1:02		/CSA	
	Degree of protection IEC/EN	IP65	IP65			
	Degree of protection NEMA/UL	NEMA 4X				
	Quality Standard	ISO 9001				

Safety notes



This device has been designed for use in stationary heating, ventilation and air-conditioning systems and must not be used outside the specified field of application. Unauthorised modifications are prohibited. The product must not be used in relation with any equipment that in case of a failure may threaten humans, animals or assets.

Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Only authorised specialists may carry out installation. All applicable legal or institutional installation regulations must be complied during installation.

The device contains electrical and electronic components and must not be disposed of as household refuse. All locally valid regulations and requirements must be observed.



Remarks

Automated Zero-Point calibration (Auto-Zero)

D- Transmitters equipped with the auto-zero calibration are maintenance-free.

The auto-zero calibration electronically adjusts the transmitter zero every 10 minutes. The function eliminates all output signal drift due to thermal, electronic or mechanical effects. The auto-zero adjustment takes approx. 4 seconds after which the device returns to its normal measuring mode. During the 4 second adjustment period, the output and display values will freeze to the latest measured value.

Manual Zero-Point calibration

In normal operation zero-point calibration should be executed every 12 months.

Attention! For executing zero-point calibration the power supply must be connected one hour before.

- Release both connection tubes from the pressure terminals + and -
- · Press the button until the LED lights permanently
- Wait until the LED flashes again and reinstall the connection tubes to the pressure ports (note + and -)

Scope of delivery

Scope of delivery Description Type Mounting plate L housing Duct connector kit, PVC tube 2 m, 2 connection elements (Plastic) for 22ADP-... Description Type A-22D-A10 A-22AP-A08


Dowel Screws

Accessories

Optional accessories	Description	Туре	
	Duct connector, Metal, L 40 mm, Tube connection 5 mm	A-22AP-A02	
	Duct connector, Metal, L 100 mm, Tube connection 5 mm	A-22AP-A04	
	Connection adapter M20 for cable 1 v 6 mm, Multinack 10 ncs	Δ-22G-Δ01 1	



Wiring diagram

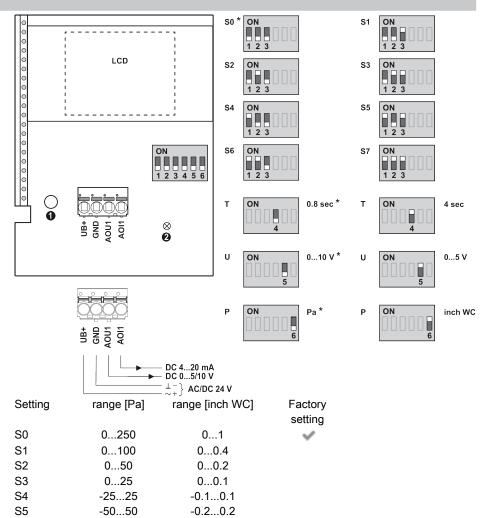

-0.4...0.4

-0.6...0.6

① Button
② Status LED
* Factory setting
P Pressure unit
T Response time
U Output signal

S6

S7


-100...100


-150...150



Dimensions

Dimensions

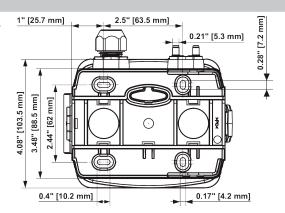

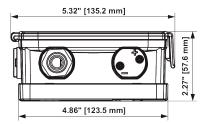

Туре	Weight
22ADP-18Q	0.29 kg
22ADP-18QA	0.29 kg
22ADP-18QB	0.30 kg
22ADP-18QL	0.30 kg